


- С осевой регулировкой длины инструмента



Принадлежности

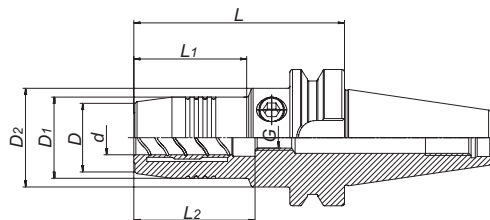


BT	d	D	D1	D2	L	L1	L2	G	Артикул
BT30	6	22	26	45	70	28,5	30	M5	311065 3106
BT30	8	24	28	45	70	29	30	M6	311065 3108
BT30	10	26	30	45	75	31	32	M8x1	311065 3110
BT30	12	28	32	45	85	45	37	M10x1	311065 3112
BT30	14	30	34	45	85	45	37	M10x1	311065 3114
BT30	16	34	38	45	90	50	42	M10x1	311065 3016
BT30	18	36	40	45	90	50	42	M8x1	311065 3018
BT30	20	38	42	45	90	52	44	M8x1	311065 3020


BT	d	D	D1	D2	L	L1	L2	G	Артикул
BT40	6	22	26	44,5	65	43	30	M5	311065 4106
BT40	8	24	28	44,5	65	44,5	30	M6	311065 4108
BT40	10	26	30	44,5	65	44,5	34	M8x1	311065 4110
BT40	12	28	32	44,5	65	44,5	39	M10x1	311065 4112
BT40	14	30	34	44,5	65	44,5	39	M10x1	311065 4114
BT40	16	34	38	50	65	44,5	42	M12x1	311065 4116
BT40	18	36	40	50	65	44,5	42	M8x1	311065 4118
BT40	20	38	42	50	65	44,5	42	M8x1	311065 4118
BT40	20	38	42	50	90	45,5	44	M10x1	311065 4020
BT40	25	53	57	62	100	55,5	50	M16x1	311065 4026
BT40	32	60	64	64	105	-	54	M16x1	311065 4033
BT40	6	22	26	50	150	102,5	30	M5	311065 4206
BT40	8	24	28	50	150	103	30	M6	311065 4208
BT40	10	26	30	50	150	103	34	M8x1	311065 4210
BT40	12	28	32	50	150	103,5	39	M10x1	311065 4212
BT40	14	30	34	50	150	104	39	M10x1	311065 4214
BT40	16	34	38	50	150	104	42	M12x1	311065 4216
BT40	18	36	40	50	150	105	42	M12x1	311065 4218
BT40	20	38	42	50	150	105	44	M16x1	311065 4220
BT40	25	53	57	62	150	105	50	M16x1	311065 4225
BT40	32	60	64	64	150	-	54	M16x1	311065 4232
BT40	6	22	26	44,5	200	152,5	30	M5	311065 4406
BT40	8	24	28	44,5	200	154	30	M6	311065 4408
BT40	10	26	30	44,5	200	154	34	M8x1	311065 4410
BT40	12	28	32	44,5	200	155	39	M10x1	311065 4412
BT40	14	30	34	44,5	200	155	39	M10x1	311065 4414
BT40	16	34	38	50	200	156	42	M12x1	311065 4416
BT40	18	36	40	50	200	156	42	M10x1	311065 4418
BT40	20	38	42	50	200	157	44	M10x1	311065 4420
BT40	25	53	57	62	200	157	50	M16x1	311065 4425
BT40	32	60	64	64	200	-	54	M16x1	311065 4432

BT	d	D	D1	D2	L	L1	L2	G	Артикул
BT50	6	22	26	44,5	90	34	30	M5	311065 5006
BT50	8	24	28	44,5	90	34	30	M6	311065 5008
BT50	10	26	30	44,5	90	34	32	M8x1	311065 5010
BT50	12	28	32	44,5	90	34	37	M10x1	311065 5012
BT50	14	30	34	44,5	90	34	39	M10x1	311065 5014
BT50	16	34	38	50	90	34	42	M12x1	311065 5016
BT50	18	36	40	50	90	34	42	M12x1	311065 5018
BT50	20	38	42	50	90	34	44	M16x1	311065 5020
BT50	25	53	57	70	105	48,5	50	M16x1	311065 5025
BT50	32	60	64	70	115	59,5	54	M16x1	311065 5032
BT50	6	22	26	44,5	120	34	27	M5	311065 5106
BT50	8	24	28	44,5	120	34	27	M6x1	311065 5108

*продолжение таблицы на следующей странице





- С осевой регулировкой длины инструмента

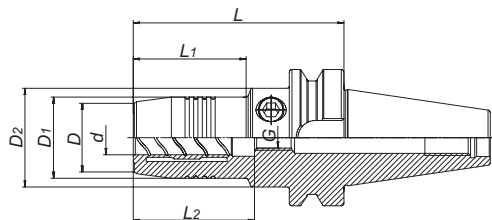

продолжение таблицы

BT	d	D	D1	D2	L	L1	L2	G	Артикул
BT50	10	26	30	44,5	120	34	32	M8x1	311065 5110
BT50	12	28	32	44,5	120	34	37	M10x1	311065 5112
BT50	14	30	34	44,5	120	34	37	M10x1	311065 5114
BT50	16	34	38	44,5	120	34	42	M12x1	311065 5116
BT50	18	36	40	44,5	120	34	42	M12x1	311065 5118
BT50	20	38	42	50	120	34	44	M16x1	311065 5120
BT50	6	22	26	44,5	150	34	30	M5	311065 5206
BT50	8	24	28	44,5	150	34	30	M6	311065 5208
BT50	10	26	30	44,5	150	34	34	M8x1	311065 5210
BT50	12	28	32	44,5	150	34	37	M10x1	311065 5212
BT50	14	30	34	44,5	150	34	37	M10x1	311065 5214
BT50	16	34	38	44,5	150	34	42	M12x1	311065 5216
BT50	18	36	40	44,5	150	34	42	M12x1	311065 5218
BT50	20	38	42	50	150	34	44	M16x1	311065 5220
BT50	25	53	57	63	150	97	48	M16x1	311065 5225
BT50	32	60	64	70	150	93	54	M16x1	311065 5232

311 065 Патроны гидрозажимные укороченные

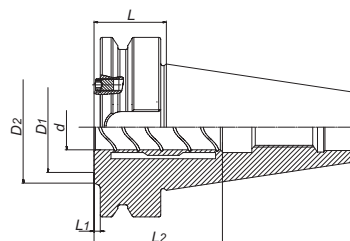


Принадлежности



BT	d	D1	D2	L	L1	L2	Артикул
BT40	20	34	50	33	5,5	42	311065 4023

311 065 Патрон гидрозажимной - набор



Принадлежности



BT	Состав набора	Артикул
BT40	Патрон гидрозажимной 311 065 4020 Втулка переходная 319118 2006 Втулка переходная 319118 2008 Втулка переходная 319118 2010 Втулка переходная 319118 2012 Втулка переходная 319118 2016	311065 4090